


hp officejet v series front panel menu guide

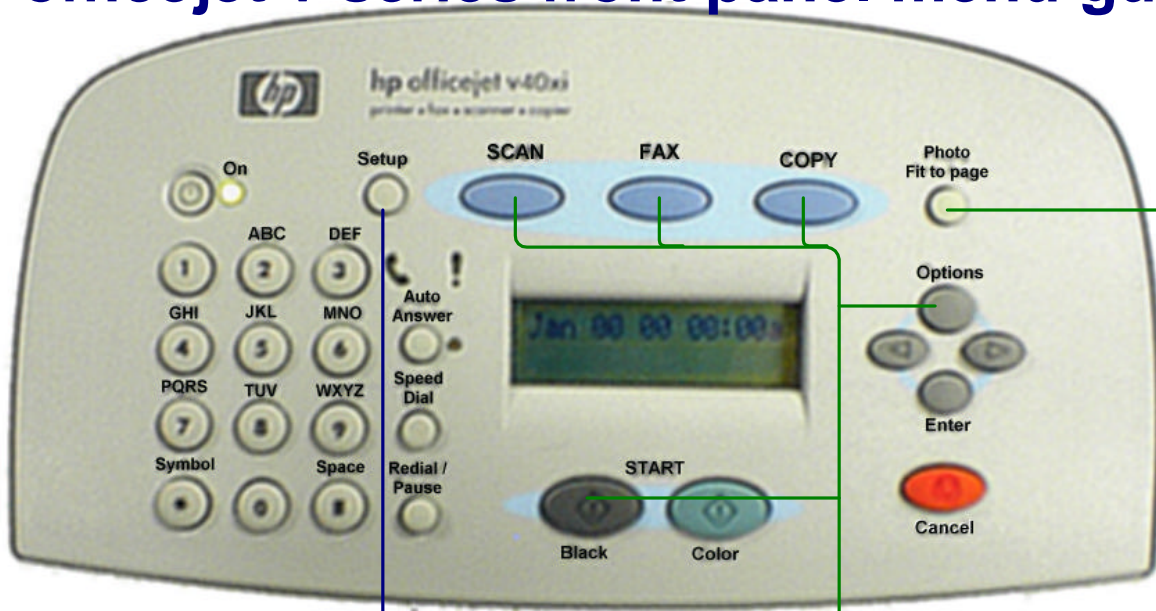

Scan, Fax, Copy:

Press one of these buttons to select the desired operation.

Options:

Press this button after the Fax or Copy button to change the operation's settings.

Start Black or Start Color:

Starts the operation in black or color.

Photo fit to Page:

Press this button to automatically enlarge smaller standard photos to fit on the selected paper size.

Setup:

1: Print Report

- 1: Last Transaction
- 2: Fax Log
- 3: Speed Dial list
- 4: Menu Settings
- 5: Self-Test Report
- 6: Automatic Reports Setup

* Every Error
Send Error
Receive Error
Every Fax
Send Only
Off

2: Speed Dial Setup

- 1: Individual Speed Dial
- 2: Group Speed Dial
- 3: Delete Speed Dial
- 4: Print Speed Dial List

Select an unassigned speed dial number by using the left/right buttons and Enter. Input the fax number and name using the same keys.

Select an unassigned number by using the left/right buttons and Enter. Select the desired assigned speed dial numbers then input a name for the group.

3: Basic Fax Setup

- 1: Date and Time
- 2: Fax Header
- 3: Rings to Answer (1-6)
- 4: Paper Size
- 5: Tone or Pulse Dialing
- 6: Ring and Beep Volume
- 7: Fax Forwarding Black Only

* Letter, A4, Legal

* Loud, Soft, Off

Select the forwarding fax number followed by the date and time the forwarding will take place. Use the left/right and Enter buttons.

4: Advanced Fax Setup

- 1: Automatic Reports Setup
- 2: AnswerRing Pattern
- 3: Busy Redial (*yes, no)
- 4: No Answer Redial (yes, *no)
- 5: Automatic Reduction (*yes, no)
- 6: Backup Fax Reception (*yes, no)
- 7: Error Correction Mode (*on, off)
- 8: Silent Detect (on, *off)

* All Rings
Single Rings
Double Rings
Triple Rings
Double and Triple

* Every Error
Send Error
Receive Error
Every Fax
Send Only
Off

5: Maintenance

- 1: Clean Print Cartridges
- 2: Align Print Cartridges
- 3: Restore Factory Defaults
- 4: Reprint Faxes in Memory
- 5: Set Language and Country